





Unscrew bolt (1).

Removing top cover:

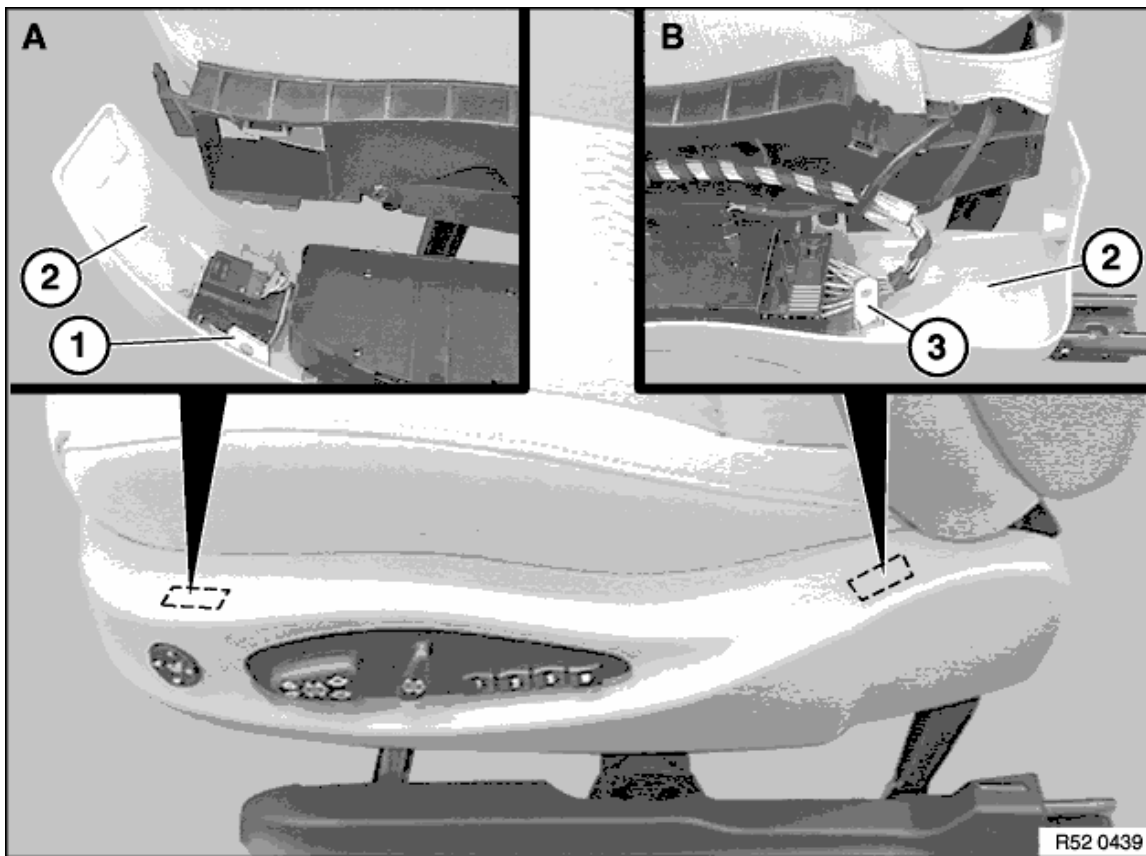


- A Snap out catch (1) on front cover (2) towards bottom and pull cover (2) outwards a little.
- B Snap out catch (3) on rear cover (2) towards front/bottom and pull cover (2) outwards a little.

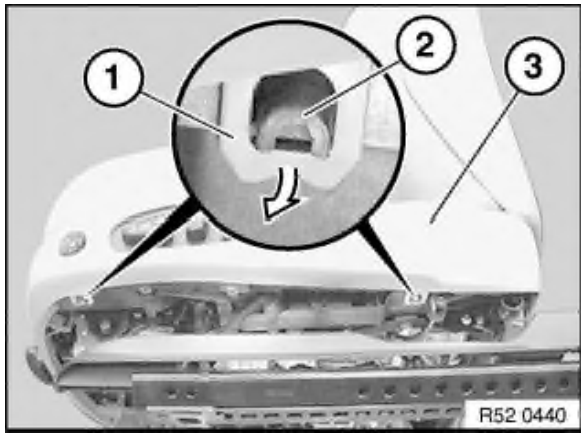

Lever lugs (1) on cover (3) out of brackets (2).




Lever out cover (1) at rear, detach at front from guide and remove.

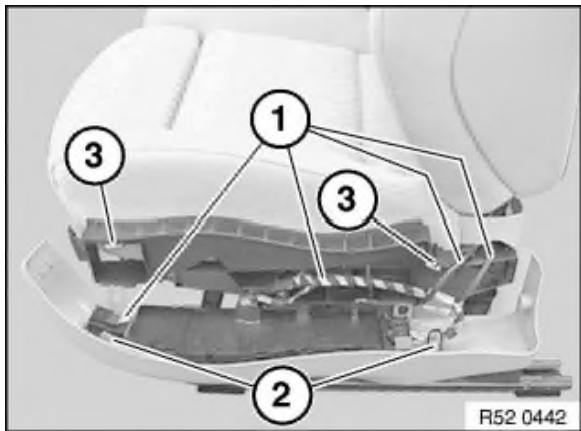


Installation:

Do not crush cables (1) during installation.
 Insert lugs (2) into mounts (3) and snap into place.

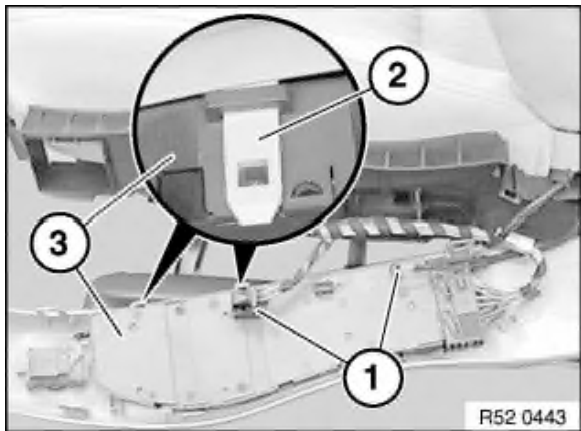


Disconnect plug connection (1).
 Lever out lugs (2) and detach switch combination (3).

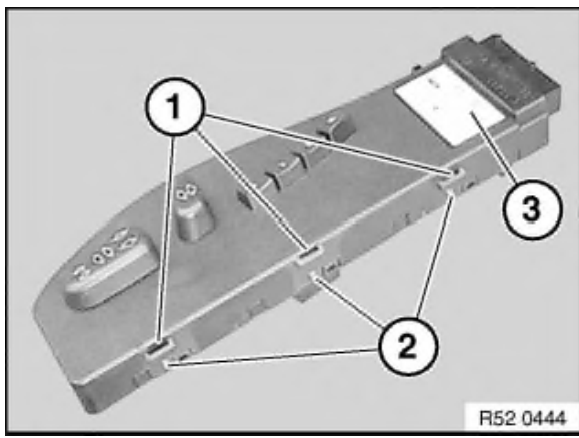

Installation:

Guides (1) and catches (2) on switch combination (3) must not be damaged.

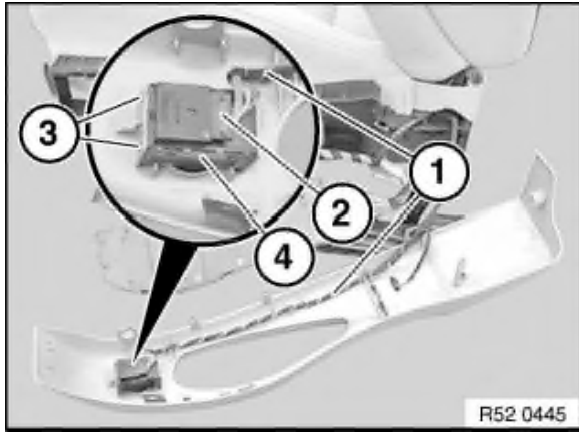


Model with lumbar supports:

If necessary, expose cable (1) and disconnect plug connection (2).

Replacement only:


If necessary, press down catches (3) on left/right and remove switch (4) from cover.

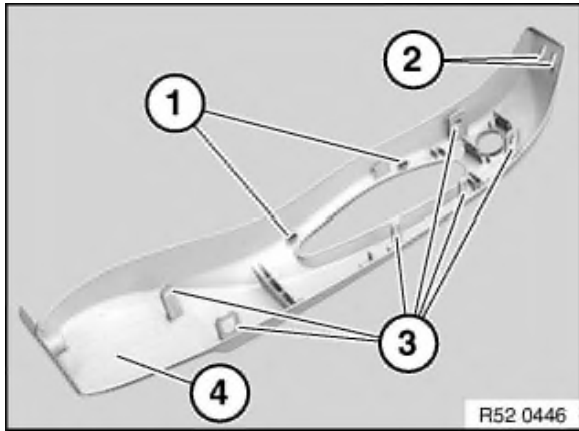

Installation:

Following parts must not be damaged, replace cover (4) if necessary:

1. Mounts for switch combination
2. Guide, front
3. Tabs

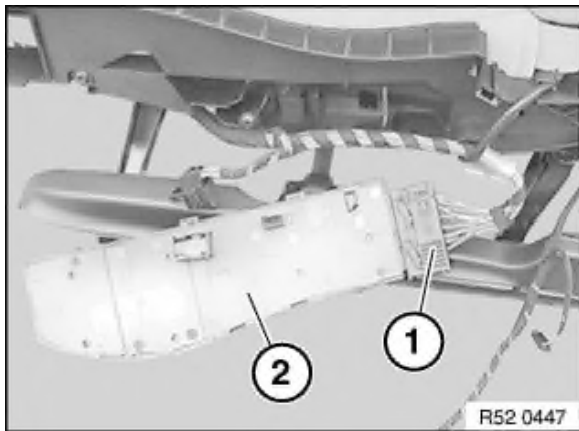

Replacement of switch combination only or in event of further work on front seat:

Disconnect plug connection (1) and remove switch combination (2).